

Biometric Lock Programming & Operating Instructions



Biometric Lock Information



Setting The Master Code



Enrolling A Fingerprint



Backlight Settings



Changing the Lock Battery

Biometric Lock Information

1. Begin all code entry or programming process' by pressing **START**
2. All codes must contain 6 digits or letters
Note: Any digit or letter can be used as many times as you wish
3. Press  after entering your code to signal the lock you have finished entering all the digits
4. If an incorrect digit was entered press  to erase the last digit entered
5. Keep the safe door in the open position when changing the lock code or fingerprint
Note: After changing the code or fingerprint check lock function several times before closing the safe door
6. Periodically clean the fingerprint sensor with a dry cloth to ensure accurate readings
7. After approximately 10 seconds of inactivity the keypad will automatically turn off.



Setting The Master Code

1. Press **START**
2. Press and enter your lock's default master code followed by the key
3. Press or to scroll to *Lock Setup*
4. Press on keypad to open *Lock Setup*
5. Press or to scroll to *Lock Program*
6. Press on keypad to open *Lock Program*
7. Press or to scroll to *Master Code*
8. Press on keypad to select *Master Code*
9. Display will prompt you to enter your new six digit master code followed by the key
10. Then you will be prompted to enter the new master code followed by the key again
11. The red light will blink several times and display *New Master Code Set*

Congratulations you've successfully changed your lock's master code. Click **Next** to enroll a fingerprint



Enrolling A Fingerprint

1. Press **START**



2. Press **▲*** and enter your code followed by the **#▼** key

Note: If you have not yet set your own master code, then enter the default master code.

3. Press **▲*** or **#▼** to scroll to *Fingerprint Setup*

4. Press **3_{DEF}** on keypad to open *Fingerprint Setup*

SELECT



5. Press **▲*** or **#▼** to scroll to *Enroll*

6. Press **2_{ABC}** on keypad to select *Enroll*

 
SELECT



7. Enter a user ID followed by the **#▼** key

Note: Each fingerprint must be associated with a numerical position.

Example: Entering 1# would enroll your fingerprint in the 1st position and 2# in the 2nd position



8. Enter *User Code* followed by the **#▼** key

Note: You can set the user code to be the same as the master code. The code associated with the 1st position is always the master code. The user code associated with each fingerprint will also open safe if the fingerprint is unavailable.

9. The green light  will illuminate as your are prompted you to place your finger on the sensor



Enrolling A Fingerprint Continued

10. Next the display will prompt you to remove your finger

11. Repeat Steps 9 & 10 two more times when prompted by the display

Note: The Sensor will take a total of three readings of your fingerprint

12. When finished the display will read *Enrolled Successfully*

Remove Finger

Enrolled
Successfully

Congratulations you are now able to open the biometric lock with your fingerprint

Turning On/Off Display Backlight

1. Press **START**



2. Press **▲*** and enter your master code or the lock's default code followed by the **#▼** key

3. Press **▲*** or **#▼** to scroll to *Display Setup*

4. Press **1_Q** on keypad to open *Display Setup*



 
5. Press **▲*** or **#▼** to scroll to *LCD Backlight*

6. Press **2_{ABC}** on keypad to open *LCD Backlight*




7. Press **▲*** or **#▼** to scroll to *Enable* or *Disable*

8. Press **1_Q** on keypad to select *Enable*



or

 Press **2_{ABC}** on keypad to select *Disable*



Changing the Biometric Lock Batteries

1. Slide keypad cover downward and remove to access battery compartment opening on underside of lock
2. Reach into battery compartment to access batteries
3. Unsnap the wired leads and replace the two 9-volt alkaline batteries
4. Slide left battery back into the compartment and position on the left side
5. Place right battery in the compartment
6. Re-attach and slide keypad cover back up into place

Note: How to recognize when the lock batteries need replacing:

- If you notice a distinct change in the pitch of the beeps.
- Erratic or inconsistent lock operation.
- If the lock beeps 20 times rapidly when you try to open it, but remains locked then it is time to change the batteries.

