

Built To A Higher Standard

**BROWN SAFE**

## Electronic Lock Operating Instruction

### -LG Safe Gard Lock-



### Operating Instructions

- Enter combination Lock will signal when proper combination has been entered
- Turn safe handle

\*Repeated beeping during an opening indicates that the Battery is low and should be replaced

\*Invalid combination entry: Lock signals three times

\*Wrong try penalty entry of three consecutive invalid combinations will initiate a 5 minute lock out period, during which time the LED flashes red at 10 second intervals

### Changing Combination

(Lock signals twice after each valid entry)

\*Change combination with door open\*

- Enter six zeros
- Enter existing combination
- Enter new six digit combination **TWICE**

\*Before closing door\*

Enter existing combination to verify proper operation

### Changing Batteries

- Remove keypad by gently lifting straight up and tilting back
- Please note keypad cable only has a few inches of free length
- Connect one 9-Volt Alkaline battery (Duracell only) to each battery clip
- Insert batteries into bottom of housing
- Replace by placing the keypad on its mounting pins and sliding down until keypad is firmly locked into position