

Built To A Higher Standard

# BROWN SAFE

Wall Safe  
Electronic Lock Operating Instructions  
-LG Combo Gard Lock-



### Operating Instructions

- Enter combination Lock will signal when proper combination has been entered
- Turn Keypad
- Open safe door

- \*Repeated beeping during an opening indicates that the Battery is low and should be replaced
- \*Invalid combination entry: Lock signals three times
- \*Wrong try penalty entry of three consecutive invalid combinations will initiate a 5 minute lock out period, during which time the LED flashes red at 10 second intervals

### Changing Combination

(Lock signals twice after each valid entry)

\*Change combination with door open\*

- Enter six zeroes
- Enter existing combination
- Enter new six digit combination TWICE

### \*Invalid Combination Entry

Lock signals three times and old combination is still valid

### Changing Batteries

- Repeated beeping during an opening indicates that battery is low and needs immediate replacement.
- Remove battery cover from inside of safe door
- Replace battery with 9-volt Alkaline battery (Duracell only)

### \*If batteries are too low to open safe door:

- Hold new battery up to contacts on front of lock
- While holding battery up to contacts, enter combination and turn keypad to open safe